



**LISBON#37376-AN/37376-LB  
#37378-AN/37378-LB**

**PLEASE READ AND SAVE FOR FUTURE REFERENCE.**

**CAUTION**

1. Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

2. All electrical connections must be in accordance with local and National Electrical Code (N.E.C.C) standards.

If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

**GENERAL**


Remove all parts and hardware from the box and make sure that none are missing by referencing the illustrations provided.

**ASSEMBLY AND INSTALLATION**


1. Take the parts out of the mounting package. Screw the end of the NIPPLE(12) into the center hole of the MOUNTING BRACKET (2) but do not tighten the hex nut.
2. Pull the SUPPLY WIRES (4&6) and the SUPPLY GROUND WIRE (8) out from the OUTLET BOX (1) and attach the MOUNTING BRACKET (2) assembly to the OUTLET BOX (1) using the slotted holes of the MOUNTING BRACKET (2) and the MOUNTING SCREWS (3) provided. (See Fig. 1)
3. Attach the power supply wires to the fixture lead wires by connecting the BLACK SUPPLY WIRE (4) to the SMOOTH FIXTURE LEAD WIRE (5) and the WHITE SUPPLY WIRE (6) to the RIBBED FIXTURE LEAD WIRE (7). Loop the FIXTURE GROUND WIRE (9) around the GROUND SCREW (11) of the MOUNTING BRACKET (2). (Note: Be sure to provide an extra 3" length of the GROUND WIRE (9).) Connect the remaining FIXTURE GROUND WIRE (9) to the SUPPLY GROUND WIRE (8) using a WIRE CONNECTOR (10). Place wiring and connections inside the OUTLET BOX (1). (See Fig. 1)
4. Place the CANOPY (13) of the fixture over the OUTLET BOX (1) so that the NIPPLE (12) protrudes out through the mounting hole located in the center of the CANOPY (13) no less than 1/4". Remove the CANOPY (13) and secure the position of the NIPPLE (12) by tightening the hex nut against the MOUNTING BRACKET (2). Place the CANOPY (13) back onto the NIPPLE (12), and secure into place using the BALL NUT (14) provided.
5. Attach both end of the CHAIN (16) on to each OPEN LINK(15), and then one end of the CHAIN (16) attach to the FIXTURE LOOP (17). Close the end of the OPEN LINKS. (18). (See Fig. 2)
6. Screw light bulbs into the lamp sockets and make sure they do not exceed the maximum wattage specified on the fixture's wattage rating label, **MAXIMUM 60W.**

**INSTALLATION IS NOW COMPLETED**

**FIG.1**

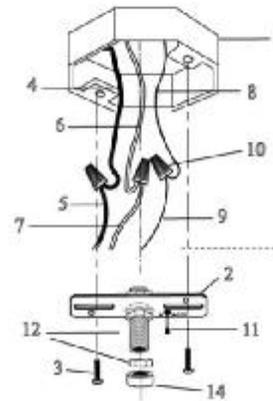

**FIG.2**

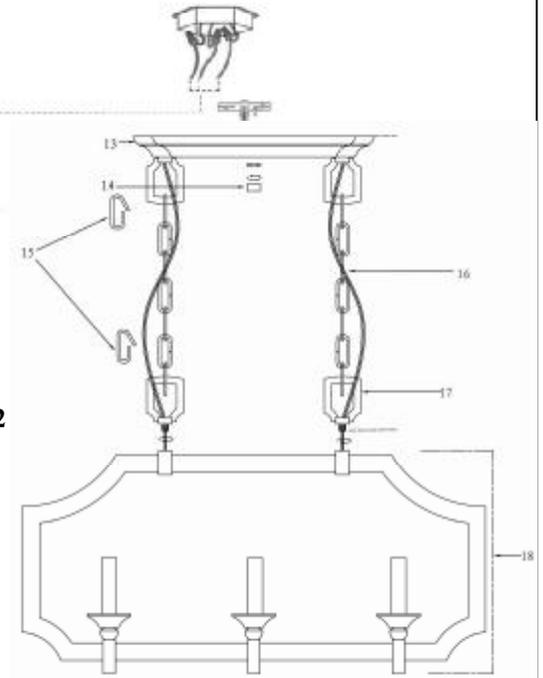

- 1. OUTLET BOX
- 2. MOUNTING BRACKET
- 3. MOUNTING SCREW
- 4. BLACK SUPPLY WIRE(not included)
- 5. SMOOTH (or BLACK) FIXTURE LEAD WIRE
- 6. WHITE SUPPLY WIRE (not included)
- 7. RIBBED (or WHITE ) FIXTURE LEAD WIRE
- 8. SUPPLY GROUND WIRE (not included)
- 9. FIXTURE GROUND WIRE

- 10. WIRE CONNECTORS
- 11. GROUND SCREW (pre-attached)
- 12. NIPPLE AND HEX NUTS (pre-attached)
- 13. CANOPY
- 14. DECORATIVE NUT (pre-attached)
- 15. OPEN CHAIN LINKS
- 16. CHAIN
- 17. FIXTURE LOOPS
- 18. FIXTURE